


Operation with SDR console in the following typical configuration:

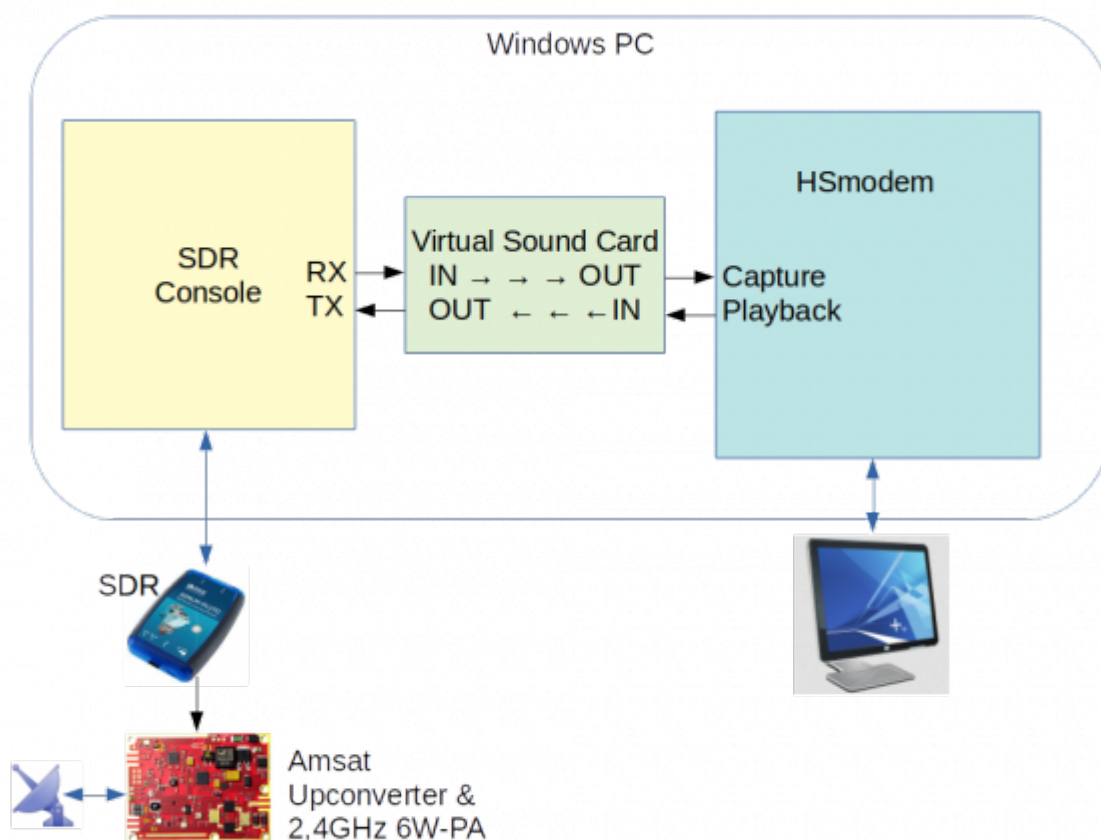

Hardware:

- Windows 10 PC
- SDR Adalm-Pluto (connected via Ethernet-USB adapter)
- TX: Amsat upconverter with 6W PA to a POTY antenna
- RX: LNB output directly to the Pluto RX input (via DC feed)

Software:

- SDR console (these tests were made with V3.0.23)
- HSmodem
- virtual audio cable from vac.muzychenko.net

for the individual settings, see the corresponding following chapters.

From:

<https://wiki.amsat-dl.org/> - **Satellite Wiki**

Permanent link:

<https://wiki.amsat-dl.org/doku.php?id=en:hsmodem:sdrconsole>

Last update: **2021/03/28 19:14**

