 


Send and receive images:

If the test data has been received correctly as explained in the previous chapter, you can now switch

to the menu item “Image”



receive and transmit images:

and try to

Quality:

Four resolutions (detail, sharpness) can be selected. This setting determines the transmission time, which is given as a rough estimate. With the setting “medium, 1min”, very sharp pictures can already be sent. Higher „Quality“ settings are only required for extreme requirements.

Big Picture:

The images are automatically scaled regardless of the image format. Almost any picture type and resolution can be sent. The scaling depends on the setting “big picture”: not activated: 320 × 240 pixels, activated: 640 × 480 pixels.

Load Image:

Click on “Load Image” to select an image to be sent. The storage location for images to be sent can be selected via the embedded file browser..

Send:

 
Click “Send” to send the selected image.

Rx Images:

The storage location for received images can be accessed by clicking on “RX Images”.

Loop (send all images in folder):

When this is enabled, all images in the same folder are sent in an endless loop.



From:
<https://wiki.amsat-dl.org/> - **Satellite Wiki**

Last update: **2021/03/28 19:14**

